

FIG. 1

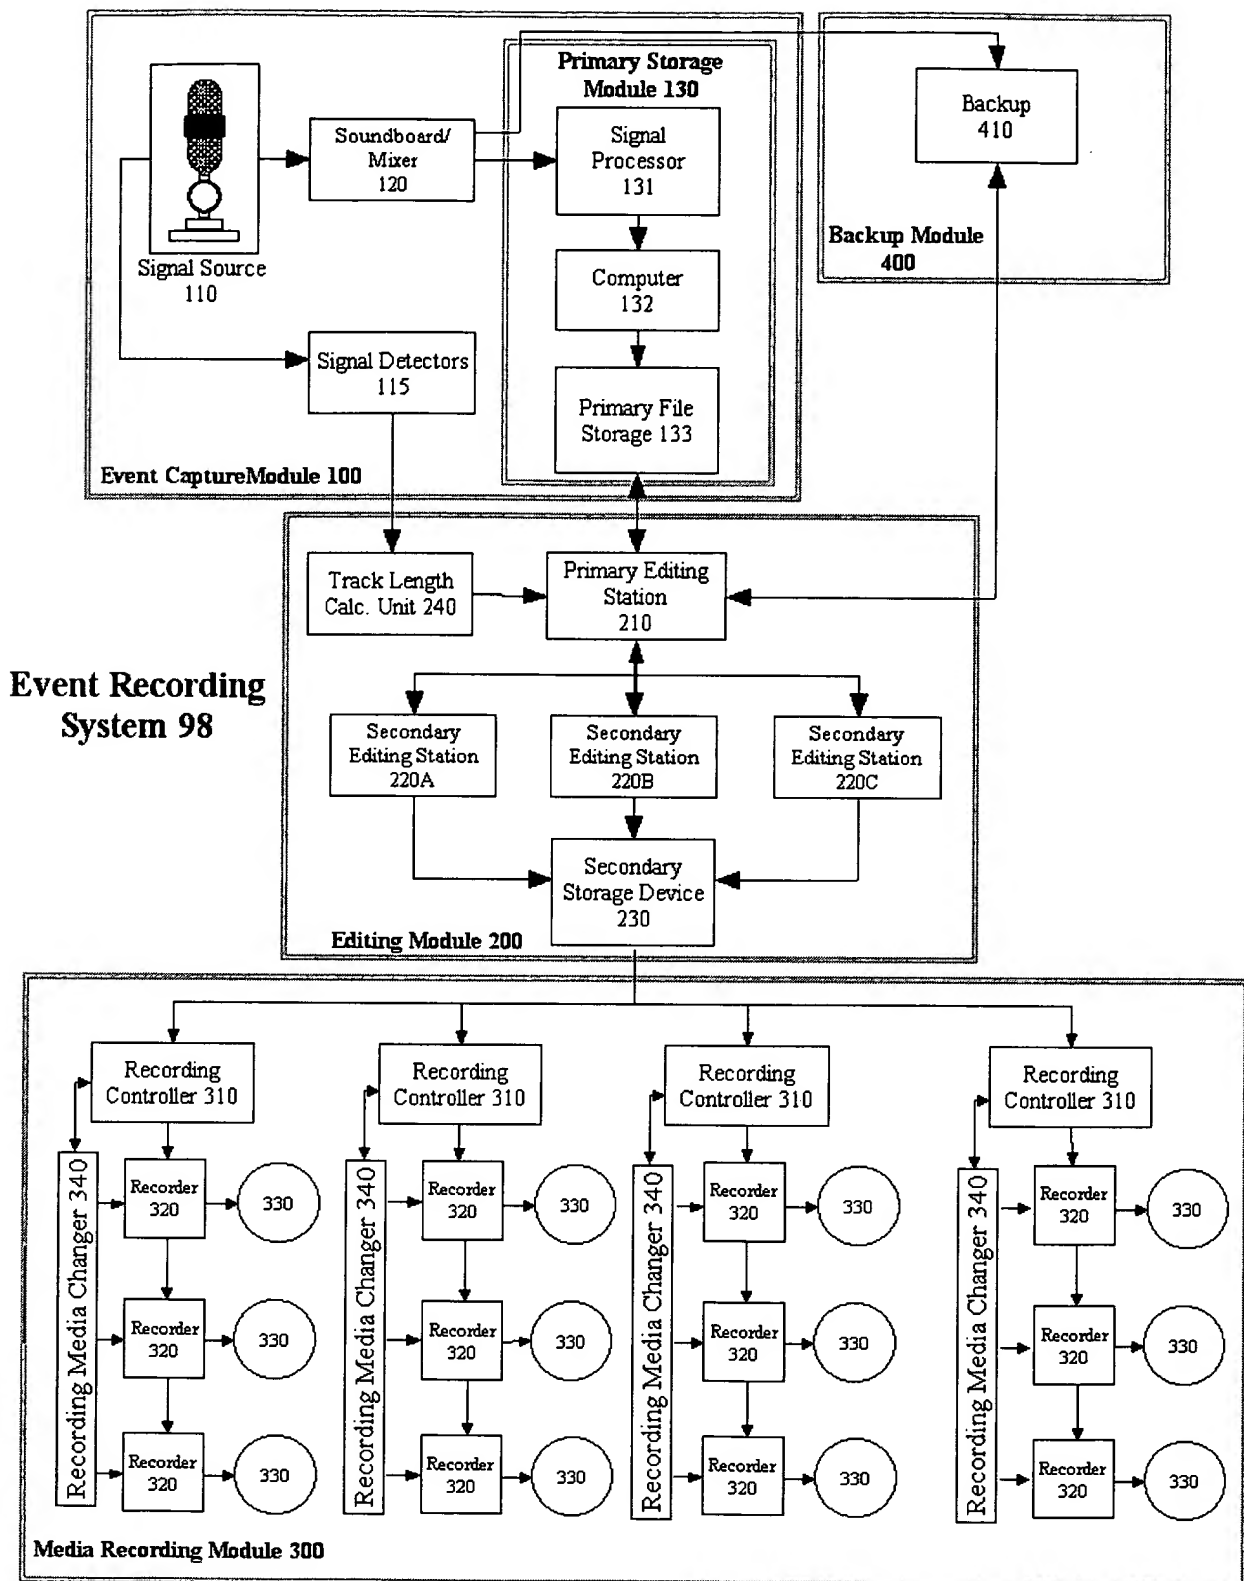


FIG. 1

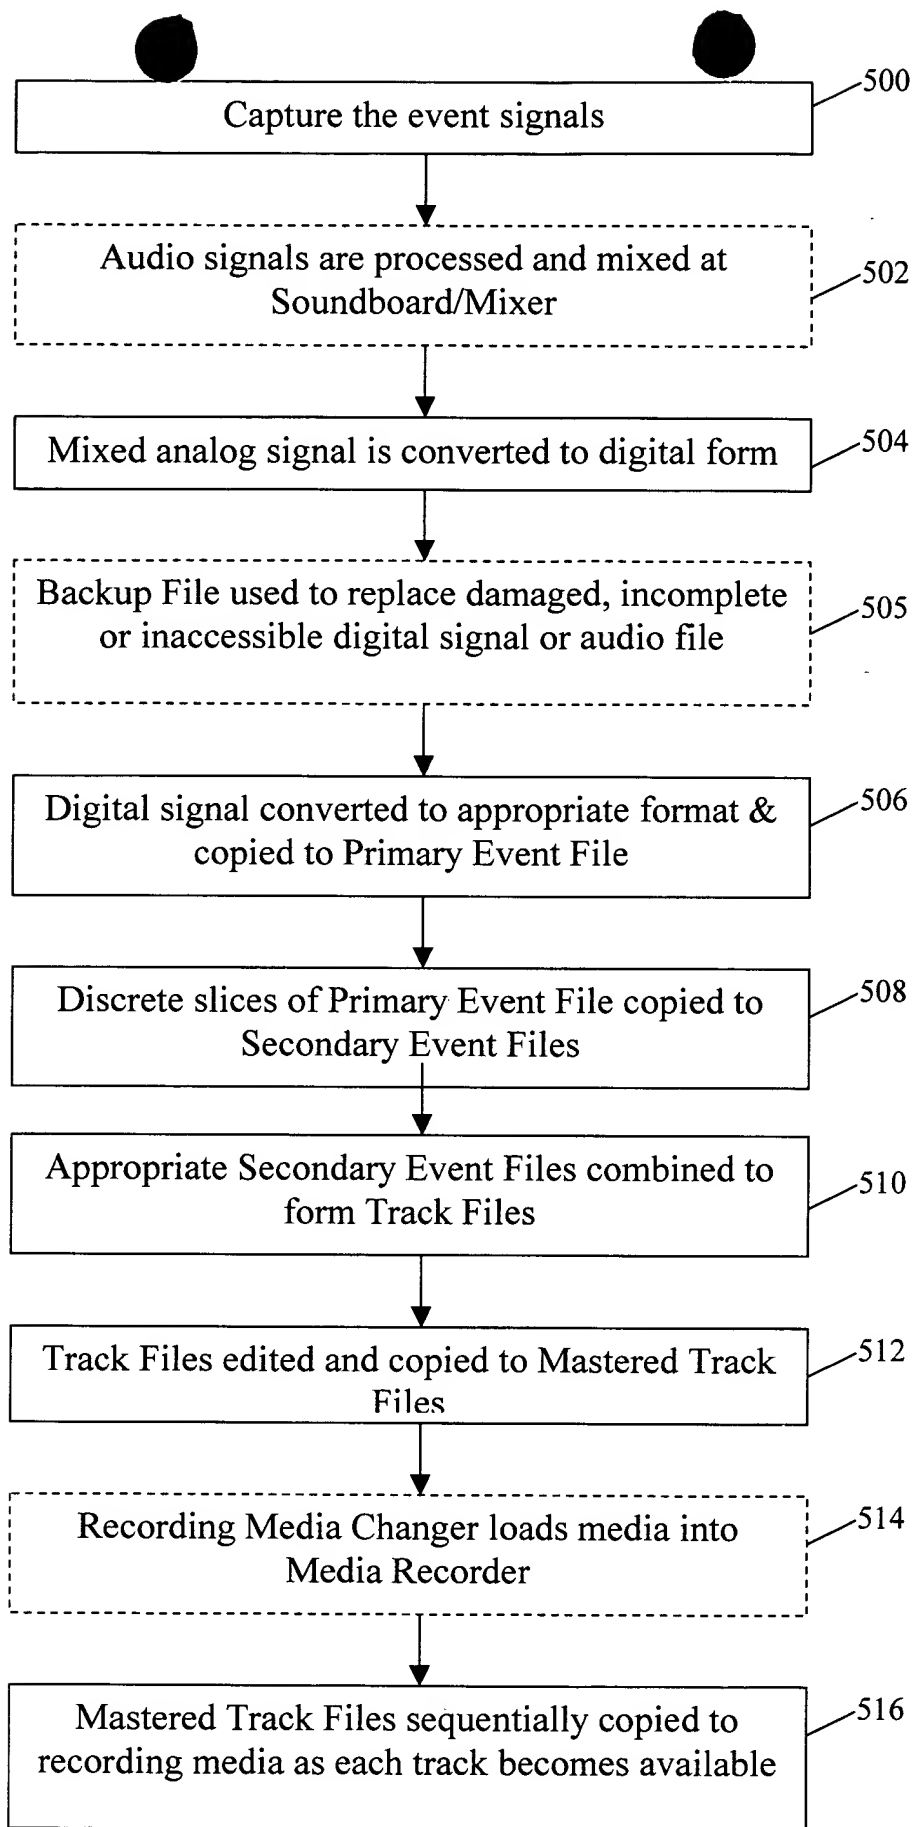


FIG. 2

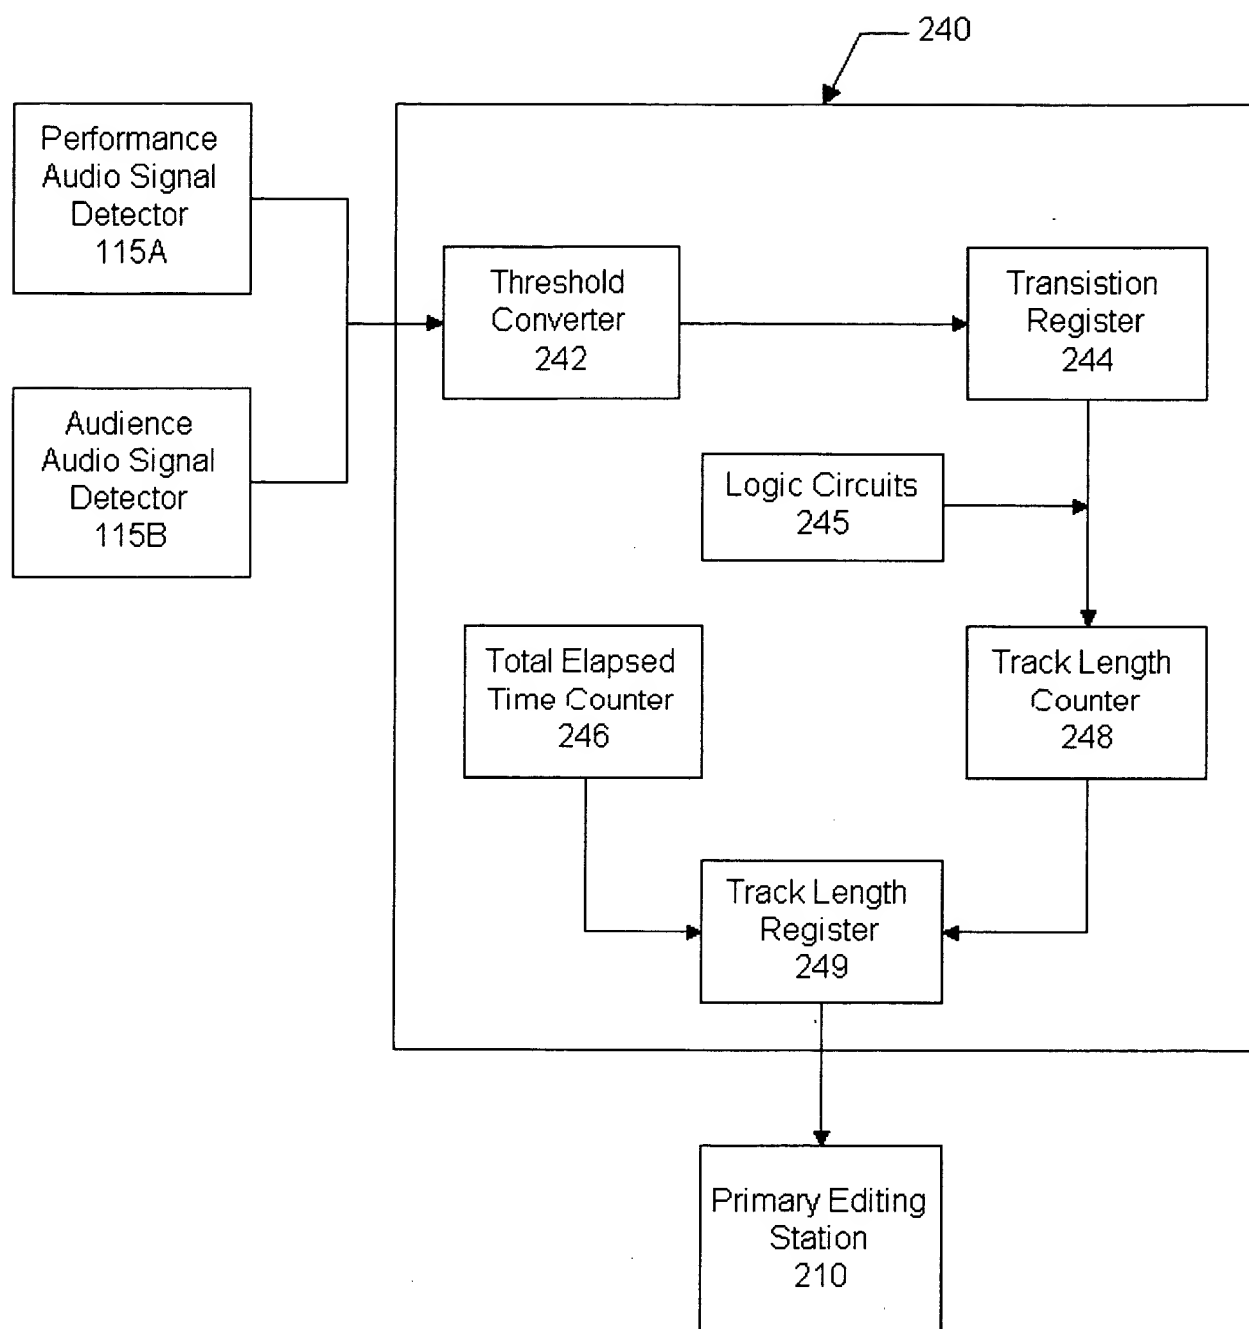


FIG. 3

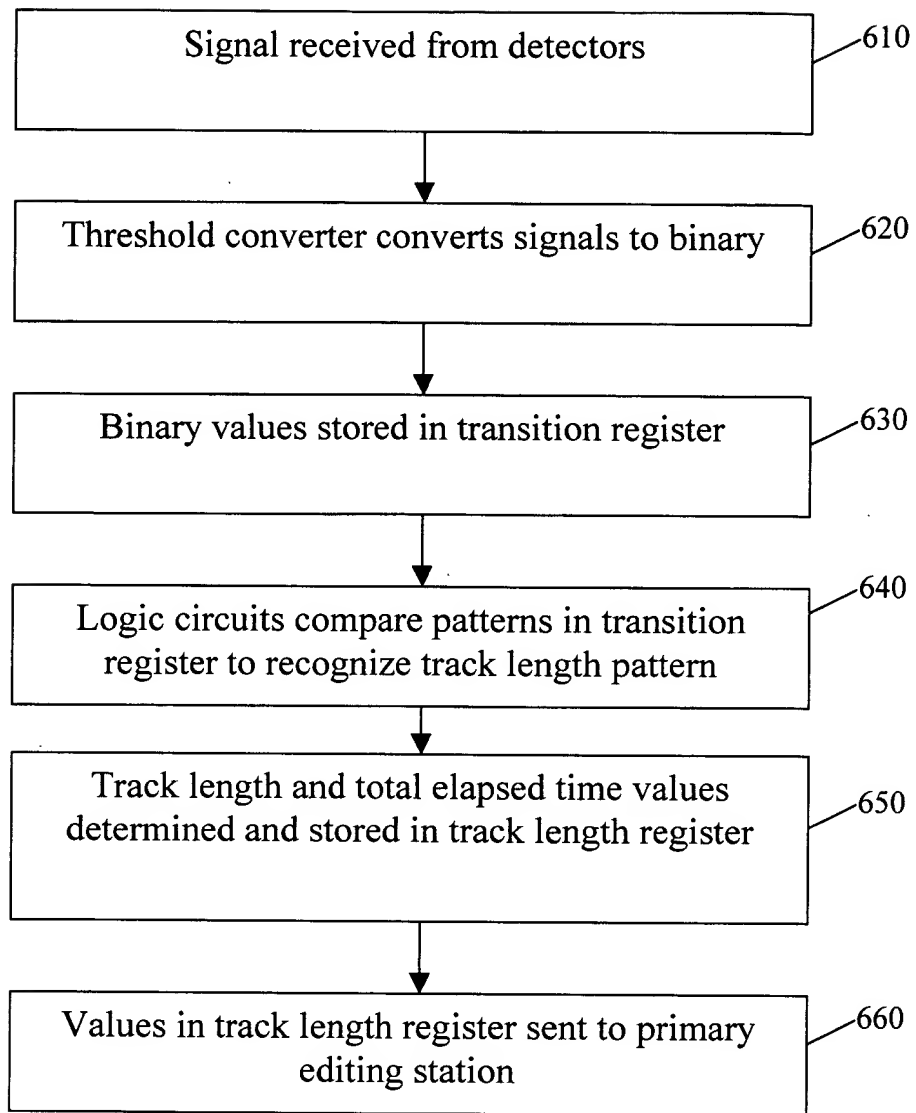


FIG. 4

```

graph TD
    700[Load Bin A with blank recording media 700] --> 705[Load recording device from Bin A 705]
    705 --> 710[Write tracks to recording media as needed (See Fig. 6) 710]
    710 --> 715[Unload recording device to Bin B 715]
    715 --> 720{Bin A empty? 720}
    720 -- No --> 705
    720 -- Yes --> 725{Done? 725}
    725 -- No --> 730
    725 -- Yes --> 755[Stop 755]
    730[Load recording device from Bin B 730] --> 735[Write tracks to recording media as needed (See Fig. 6) 735]
    735 --> 740[Unload recording device to Bin A 740]
    740 --> 745{Bin B empty? 745}
    745 -- No --> 730
    745 -- Yes --> 750{Done? 750}
    750 -- No --> 730
    750 -- Yes --> 755
  
```

CDWN Application.doc

09364269.092604

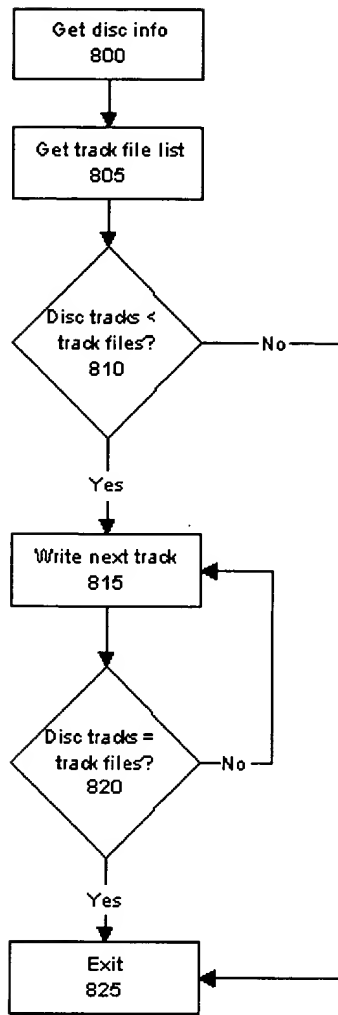


FIG. 6